


**REPLACEMENT PARTS LIST FOR
MODELS B160NG AND B120LP**

ITEM NO.	NO. REQ'D.	STOCK NO.	DESCRIPTION
1	1	E00332	Manual Control Valve
2	1	E01488	Frame Assembly
3	1	E04466	Filter/Diffuser
4	1	E05362	Orifice—Pilot B120LP
5	1	E05369	Orifice—Pilot B160NG
6	1	E06380	Burner—B120LP
7	1	E06397	Burner—B160NG
8	1	E06391	Combustion Chamber—B160NG
9	1	E06392	Combustion Chamber—B120LP
10	1	E09352	Thermocouple
11	1	E11667	Regulator—B160NG
12	1	E11357	Pilot Burner
13	1	E11695	Regulator—B120LP
14	1	E14459	Top Plate
15	1	E14520	Base Plate
16	4	E14521	Mounting Brace
17	1	E14522	Pilot Bracket
18	1	E16381	Hose—B120LP
19	1	E16425	Pilot Supply Tube—Flex
B120LP			
① ② ③ ④ ⑥ ⑨ ⑩ ⑫ ⑬ ⑭ ⑮ ⑯ ⑰ ⑱			
B160NG			
① ② ③ ⑤ ⑦ ⑧ ⑩ ⑪ ⑫ ⑬ ⑮ ⑯ ⑰ ⑱			

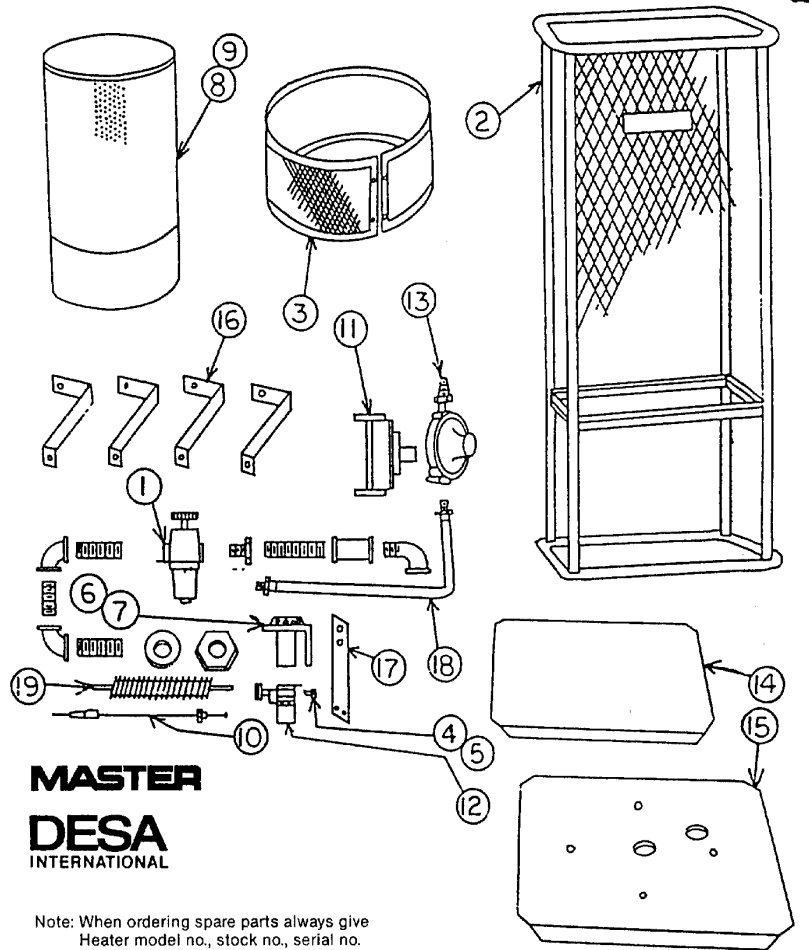

**MASTER
DESA
INTERNATIONAL**

Note: When ordering spare parts always give Heater model no., stock no., serial no. and types of gas used.

2. When disassembling parts from heater for repair, carefully note orientation of parts, then reverse procedure when assembling.