Reddy M85E Spect 2965 G14

Form# 2393-1 6.69

		•					
1	M13134G3	Shell, Upper	ć	1 13	WLM-4	Lockwasher, 1/4 in.	
1	M17015G1	Shell, Upper	ć	_		(Motor Clamps) 2	G.E. RELAY-
2	M16679	Deflector, Heat	т	- 14	NPC-4C	Nut, Hex, 1/4-20	MOTOR
3	M16781G1	Combustion Chamber		1	2.10 10	The state of the s	MEAD HOYOR BLACK
-	M16887G3	Combustion Chamber		- 15	M16777	• •	MOTORIN 30
-	M11084-27	Screw (Combustion		- 10		Shell, Lower ¢ 1	LINE T
	milion II	Chamber attaching,		1.0	M16810	Shell, Lower ¢ -	GROUND
				16 2	M11084-27	Screw (Upper Shell to	** KLIXON RELAY
	3411007.00	front)	*	_		Lower Shell) * 6	TRANSPORMER RED 8 1
-	M11084-29			17	M11271-6	Nut, Tinnerman (Upper	
		Chamber attaching,				Shell to Lower Shell) 6	BLACK
		rear)	*	2 18	M12330	Bracket, Shell Support 1	WHITE WIRE NUTS
4	M15995	Plug Button (Rear head			M12828	Bracket, Shell Support -	GREEN
		of Combustion		-	M11084-27	Screw (Support Bracket	BLACK
		Chamber)		1		to Lower Shell and	20
5	Reference	Burner Head Assembly			·	Fuel Tank) * 4	~ / 0
		(See Figure 14)	@	1 -	M11084-29		
	M11084-27	Screw (Burner Head to				Support Bracket) * 2	
		Combustion Chamber)	*	3 19	1000576	Grommet (Ignition Cable	
6	M16879	Air Line	@	1	2000010		
	M16804	Air Line	@	- 20	M15809	thru Lower Shell) 2	
7	M15807	Strap, Retainer	6	1	1112 3003	Piug Button (for 17/32"	
•	M16871	Strap, Retainer		- 21	****	dia. hole) 1	
				- 21	M15995-2	Plug Button (for 7/16"	
-	M11084-27	Screw (Retainer Strap				dia. hole)	
		to Lower Shell)		2 22	M12650-3	Capacitor (Alternate: M12650-4) -	
8	M12464	Fan, 20° Pitch (Alternate:	:	1 23	M12651	Clamp, Capacitor Mounting	
		M19566)				(for Mallory Capacitor) -	\$ \land \tau \mathred \tau \tau \mathred \tau \tau \tau \tau \tau \tau \tau \tau
	M17920	Fan, 20° Pitch			M16708	Clamp, Capacitor Mounting	* \$ / 6 .
-	SF4-2-1/2K	Setscrew, Soc. hd., cup				(for G-E Capacitor) -	
		pt, 1/4-28 (Fan to		_	M11084-27	Screw (M12651 Clamp to	1 M16789G2 Filter Assy Fuel
		Motor Shaft)		2		Motor Support Bracket) * -	. Filter Assy, Fuel @ 1
9	Reference	Motor Package Assembly		-	M15823-26		. Finter Assy, Fuel @
		(See Figure 15)	(c)	1	14111020-20	Screw (M16708 Clamp to	interrupe (a) (1)
10	M16661	Clamp, Motor	(G		Omo are	Motor Support Bracket) * -	Filter Tube
11	M13620			•	ST2-8B	Screw (M16708 Clamp) * -	1B M17460 . Filter, Fuel (Used with
		Spacer, Motor Clamp		2 24	M16646	Bracket, Motor Support 1	M16790-2 or M16790-3
12	HC4-10C	Screw (Motor Clamps)	*	2 25	1000	* 6	Filter Tube as alternate
				25 26	1000576	Grommet (Motor Leads	for M16789G2 or
				20	M17921	Transformer, 5000-Volt	M16789G3)
						(G-E) @ 1	
					M17922	Transformer (Jefferson)	1
						Alternate for M17921 @	
				-	M11084-27	Screw (Transformer to	
						Motor Support Bracket) * 2	
				27	M11954	Bushing, Strain Relief	50
						(Service Cord to Lower	
						CL - 111	
	7			28	M15779G8	Country (Text.)	
	<u> </u>				M15779G9		3 3 0 1
8				29	M13942-4	Service (Extension) Cord 1	
	1.6	<i>></i>		30	M16797G1	Connector (Wire Nut) 2	10
1	, n	\checkmark		00	MIGISICIT	Fuel Tank	
Y	A 2	. The Second					
<u> </u>	1010						
_	The state of	14					
	\$ (59)	B 10 13 /					
	/ 1	1 1 1					
	1						T-1 1-14
	11 "	VO'Y A		31	M3353	O	
	>	12 7		0.2	1410000	Cap, Fuel Tank (Used	
	6	10-24 25 23				with M16797 and	A ,
			22	0.1		M16806G1 Fuel Tanks) A 1	
		- N W ~ / ~ ~		31	M18051	Cap, Fuel Tank (Used	
		18-10	•				
			•			with M18360G1 and	3 M16741-18 . Ring. Retaining
	17-	20	-26			with M18360G1 and M18371G1 Fuel Tanks) B 1	i reng, retaining
	17	20)-26	31A	M18053	with M18360G1 and M18371G1 Fuel Tanks) B 1	- M16787G4 . Nozzle Adapter Assy
	17	200) -26 -27		M18053	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and	- M16787G4 · Nozzle Adapter Assy 1 M16787G3 · Nozzle Adapter Assy -
	17- 15	200)-26	31A > 36 37		with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and	- M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - 4 M16791 Connector, Male 1
	17- 15- 16-0	20)-26		M18053 M10990-3	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used	- M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - 4 M16791 . Connector, Male 1 5 M5976 . Connector, Male 1
	15	20 20)-26	31A 36 37 32	M10990-3	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371G1 Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1	- M16787G4 Nozzle Adapter Assy M16787G3 Nozzle Adapter Assy 4 M16791 Connector, Male 5 M5976 Connector, Male 6 M8882 Sieeve, Nozzle Scal
	15	220)-26 (h)	31A > 36 37		with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371G1 Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1	- M16787G4 Nozzle Adapter Assy M16787G3 Nozzle Adapter Assy 4 M16791 Connector, Male 5 M5976 Connector, Male 6 M8882 Sleeve, Nozzle Scal 7 M10659-1 Washer, Nozzle Scal 8 M19809-1
	15	200) -26 	31A 36 37 32 33	M10990-3	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371G1 Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq.	- M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - M16787G3 Nozzle Adapter Assy - M16791 Connector, Male 1 5 M5976 Connector, Male 1 6 M8882 Sleeve, Nozzle Scal 1 7 M10659-1 Washer, Nozzle Scal 2 8 M10809-1 Spring, Nozzle Scal 1
	15-	20 20 20 20 21 21 21 21 21)-26 	31A 36 37 32	M10990-3	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371G1 Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1	- M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - M16791 Connector, Male 1 Sperior M8882 Sleeve, Nozzle Seal 1 M10659-1 Washer, Nozzle Seal 2 M10809-1 Spring, Nozzle Seal 1 M18048 Nozzle, Aspirating,
	15-06-06-06-06-06-06-06-06-06-06-06-06-06-)-26 	31A 36 37 32 33	M10990-3	with M18360G1 and M18371GI Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371GI Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used)	M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - M16791 Connector, Male 1 M18976 Connector, Male 1 M10679-1 Washer, Nozzle Scal 1 M10679-1 Washer, Nozzle Scal 2 M18048 Nozzle, Aspirating, 0.61 gph 1
	16	27	26	31A 36 37 32 33 34	M10990-3	with M18360G1 and M18371GI Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371GI Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used)	- M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - M16791 Connector, Male 1 S M5976 Connector, Male 1 M10659-1 Washer, Nozzle Scal 2 M10809-1 Spring, Nozzle Scal 1 M18048 Nozzle, Aspirating, 0,61 gph M18022 Nozzle, Aspirating,
	17—15—16—16—16—16—16—16—16—16—16—16—16—16—16—	27	26	31 A 36 37 32 33 34 35	M10990-3	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371G1 Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used) Bracket, Starting Relay	M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy -
	16	27	26	31 A 36 37 32 33 34 35	M10990-3 M13990 M11952	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371G1 Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used) (Not Used) Bracket, Starting Relay Mounting S 1	M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy -
	31	27	26	31A 36 32 33 34 35 36	M10990-3	with M18360G1 and M18371GI Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371GI Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used) (Not Used) Bracket, Starting Relay Mounting \$ 1 Screw (Relay Mounting	M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy 1 M16791 Connector, Male 1 1 1 1 1 1 1 1 1
	31	27	26	31A 36 32 33 34 35 36	M10990-3 M13990 M11952	with M18360G1 and M18371GI Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371GI Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used) (Not Used) Bracket, Starting Relay Mounting \$ 1 Screw (Relay Mounting Bracket to Lower	- M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - M16791 Connector, Male 1 5 M5976 Connector, Male 1 6 M8882 Sleeve, Nozzle Scal 1 7 M10659-1 Washer, Nozzle Scal 2 8 M10809-1 Spring, Nozzle Scal 1 9 M18048 Nozzle, Aspirating, 0, 61 gph 1 M18022 Nozzle, Aspirating, 1.1 gph 1 10 M16535 Adapter, Nozzle 1 11 M16895G1 Spark Plug Assy @ 1
	31	27)-26 	31A 36 37 32 33 34 35 36	M10990-3 M13990 M11952 M11084-27	with M18360G1 and M18371G1 Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371G1 Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used) (Not Used) Bracket, Starting Relay Mounting \$ 1 Screw (Relay Mounting Bracket to Lower Shell) *\$ 1	M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy 1 M16791 Connector, Male 1 M1976 Connector, Male 1 M1977 Connector, Male M1977 Connector, Male M1977 Connector, M
	31	27	26	31A 36 32 33 34 35 36	M10990-3 M13990 M11952	with M18360G1 and M18371GI Fuel Tanks) B 1 Screen, Filler Neck (Used with M18360G1 and M18371GI Fuel Tanks) B 1 Bushing, Rubber (Fuel Filter into Fuel Tank) 1 Plug, Pipe, 1/4 in., Sq. hd. (Fuel Tank Drain) 1 (Not Used) (Not Used) Bracket, Starting Relay Mounting \$ 1 Screw (Relay Mounting Bracket to Lower	- M16787G4 Nozzle Adapter Assy 1 M16787G3 Nozzle Adapter Assy - M16791 Connector, Male 1 5 M5976 Connector, Male 1 6 M8882 Sleeve, Nozzle Scal 1 7 M10659-1 Washer, Nozzle Scal 2 8 M10809-1 Spring, Nozzle Scal 1 9 M18048 Nozzle, Aspirating, 0, 61 gph 1 M18022 Nozzle, Aspirating, 1.1 gph 1 10 M16535 Adapter, Nozzle 1 11 M16895G1 Spark Plug Assy @ 1